


## QUICK•STEP® CLIPS

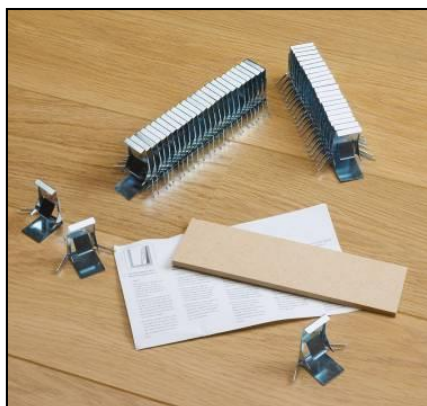

### Order codes:

Depends on the thickness of the floor: 7mm, 8mm or 9.5mm. Cannot be used with 12 mm floors.

|                                                                                     |                                                                                                      |                                                                                                 |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|  |  <b>7mm - 8mm</b> |  <b>9 mm</b> |
| QSSK(-) 58 x 12 mm                                                                  | QSCLIPSKME7080A                                                                                      | QSCLIPSKME95A                                                                                   |

### Product description

Revolutionary clip system for the glue-free and screw-free attachment of skirting boards.

### Contents:

- 50 clips (=1 bag)
- Tool for sawing the skirting boards

Packaging quantity: 50 clips (=1 bag)

## **Applications**

Quick-Step® has a wide range of skirting boards for finishing the necessary expansion joint around your floor. Quick-Step® skirting boards can be attached in various ways, including using the Quick-Step® Clips.

Quick-Step® clips enable you to attach your skirting boards without the use of glue or screws. The clips enable you to attach the standard skirting board and your Quick-Step® floor, so that the skirting board is not attached to the wall.

The clips are available for the Quick-Step® Standard skirting (QSSK(-) 58x12) and are suitable for expansion joints of up to max. 12mm.

Other attachment methods for Quick-Step® skirting boards are: Quick-Step® ONE4ALL glue (multifunctional glue) and the Quick-Step® track (Plastic rail for installing the Quick-Step® Parquet skirting board and the Largo skirting board).

For more information visit the TDS of the One 4 All or the Quick-Step® Track.

## **Specifications**

### ✓ Removable

The skirting boards can easily be removed again thanks to the glue-free and screw-free attachment. This is especially useful when painting walls, hanging wallpaper or replacing a floorboard.

### ✓ Easy to install

The clips provide an easy method of working. This can give you a time-saving of up to 50% when installing your skirting boards.

### ✓ Guaranteed expansion joint


The Quick-Step® clips have been designed so that they can move with the floor. The sprung metal pieces that press against the side of the floor enable the floor to move.

## **Instructions for use**



Important! (read before installing the floor)


- **Make sure you use the correct clips for the type of floor that is being installed.** See diagram above with order codes.
- The clips have to be installed together with the floor.  
The clips are used on the floor and make the joint between the Quick-Step® floor and the skirting board, so that the skirting board is not attached to the wall.
- Read the floor installation instructions carefully and always remove the tongue or groove from the plank that the clips are attached to.
- The use of spacers to guarantee the expansion joint is also required! Do not forget to remove the spacers after installation. (For more information about these spacers from the Quick-Step® Installation set, visit our website [www.quick-step.com](http://www.quick-step.com))

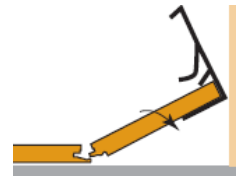


## How to install?

- Attach the clips to the floor every 40cm. It is best to attach a clip on the joint where two skirting boards meet.

Tip: The clips can still be moved a little after they have been attached to the floor, allowing them to cover the joining between 2 skirting boards.

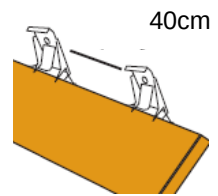


The diagram below shows where the clips are to be attached to the skirting board.

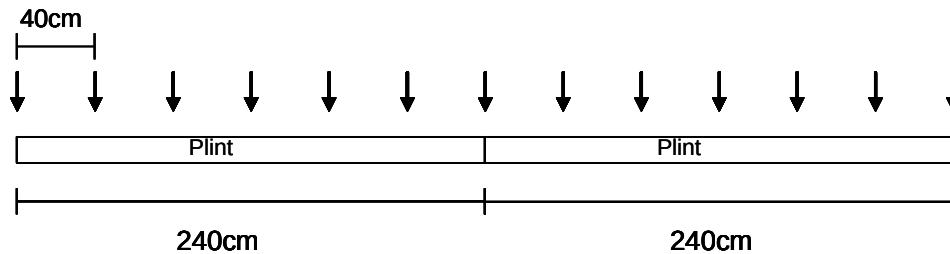


Note: it is recommended to use more clips with uneven walls. If the unevenness is too great, gaps between wall and skirting board are unavoidable.

- In order to achieve a good result, there must be a clip on either end of the skirting board in one corner of the room (as close as possible to the corner).

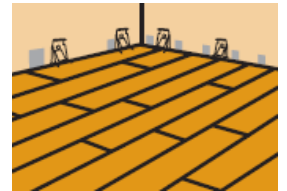


Important! Using Quick-Step® Clips has an impact on sawing mitres. The clips make the skirting board more of an angle. Use the tool supplied to saw perfect mitres for your skirting boards (see diagram).

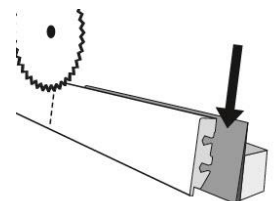

- When the clips are attached to the floor, the skirting boards can be easily clicked into position. Lean the top of the skirting board against the Quick-Step® clips. Click the skirting board secure by pushing the bottom of the skirting board upwards.

Tip: the more the skirting board is angled, the easier it is to click in the clips.

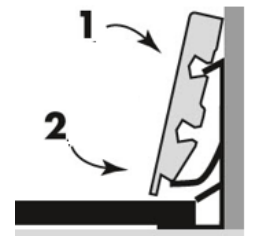

- To remove the skirting board again, perform the actions outlined above in reverse order (by pulling the bottom of the skirting board).

Tip: when removing the first skirting board, start at a far end if possible (a sliding window or a doorway). You can easily remove the following skirting boards along the side.

